


**NOTES:**

1. Willow pole planting and brushlayering shall be installed during bank grading and riprap placement to ensure good contact with 'native ground' and soil fill.
2. Willow poles and brush layers shall extend down into expected soil moisture zones (vadose).
3. Cut small holes or slits in filter fabric as necessary.
4. Place soil fill (cobbles, gravel, soil) around cuttings.
5. Place riprap carefully, do not end dump. Some damage to brush layers and willow poles is unavoidable and acceptable. Deeply planted willow material will regenerate.

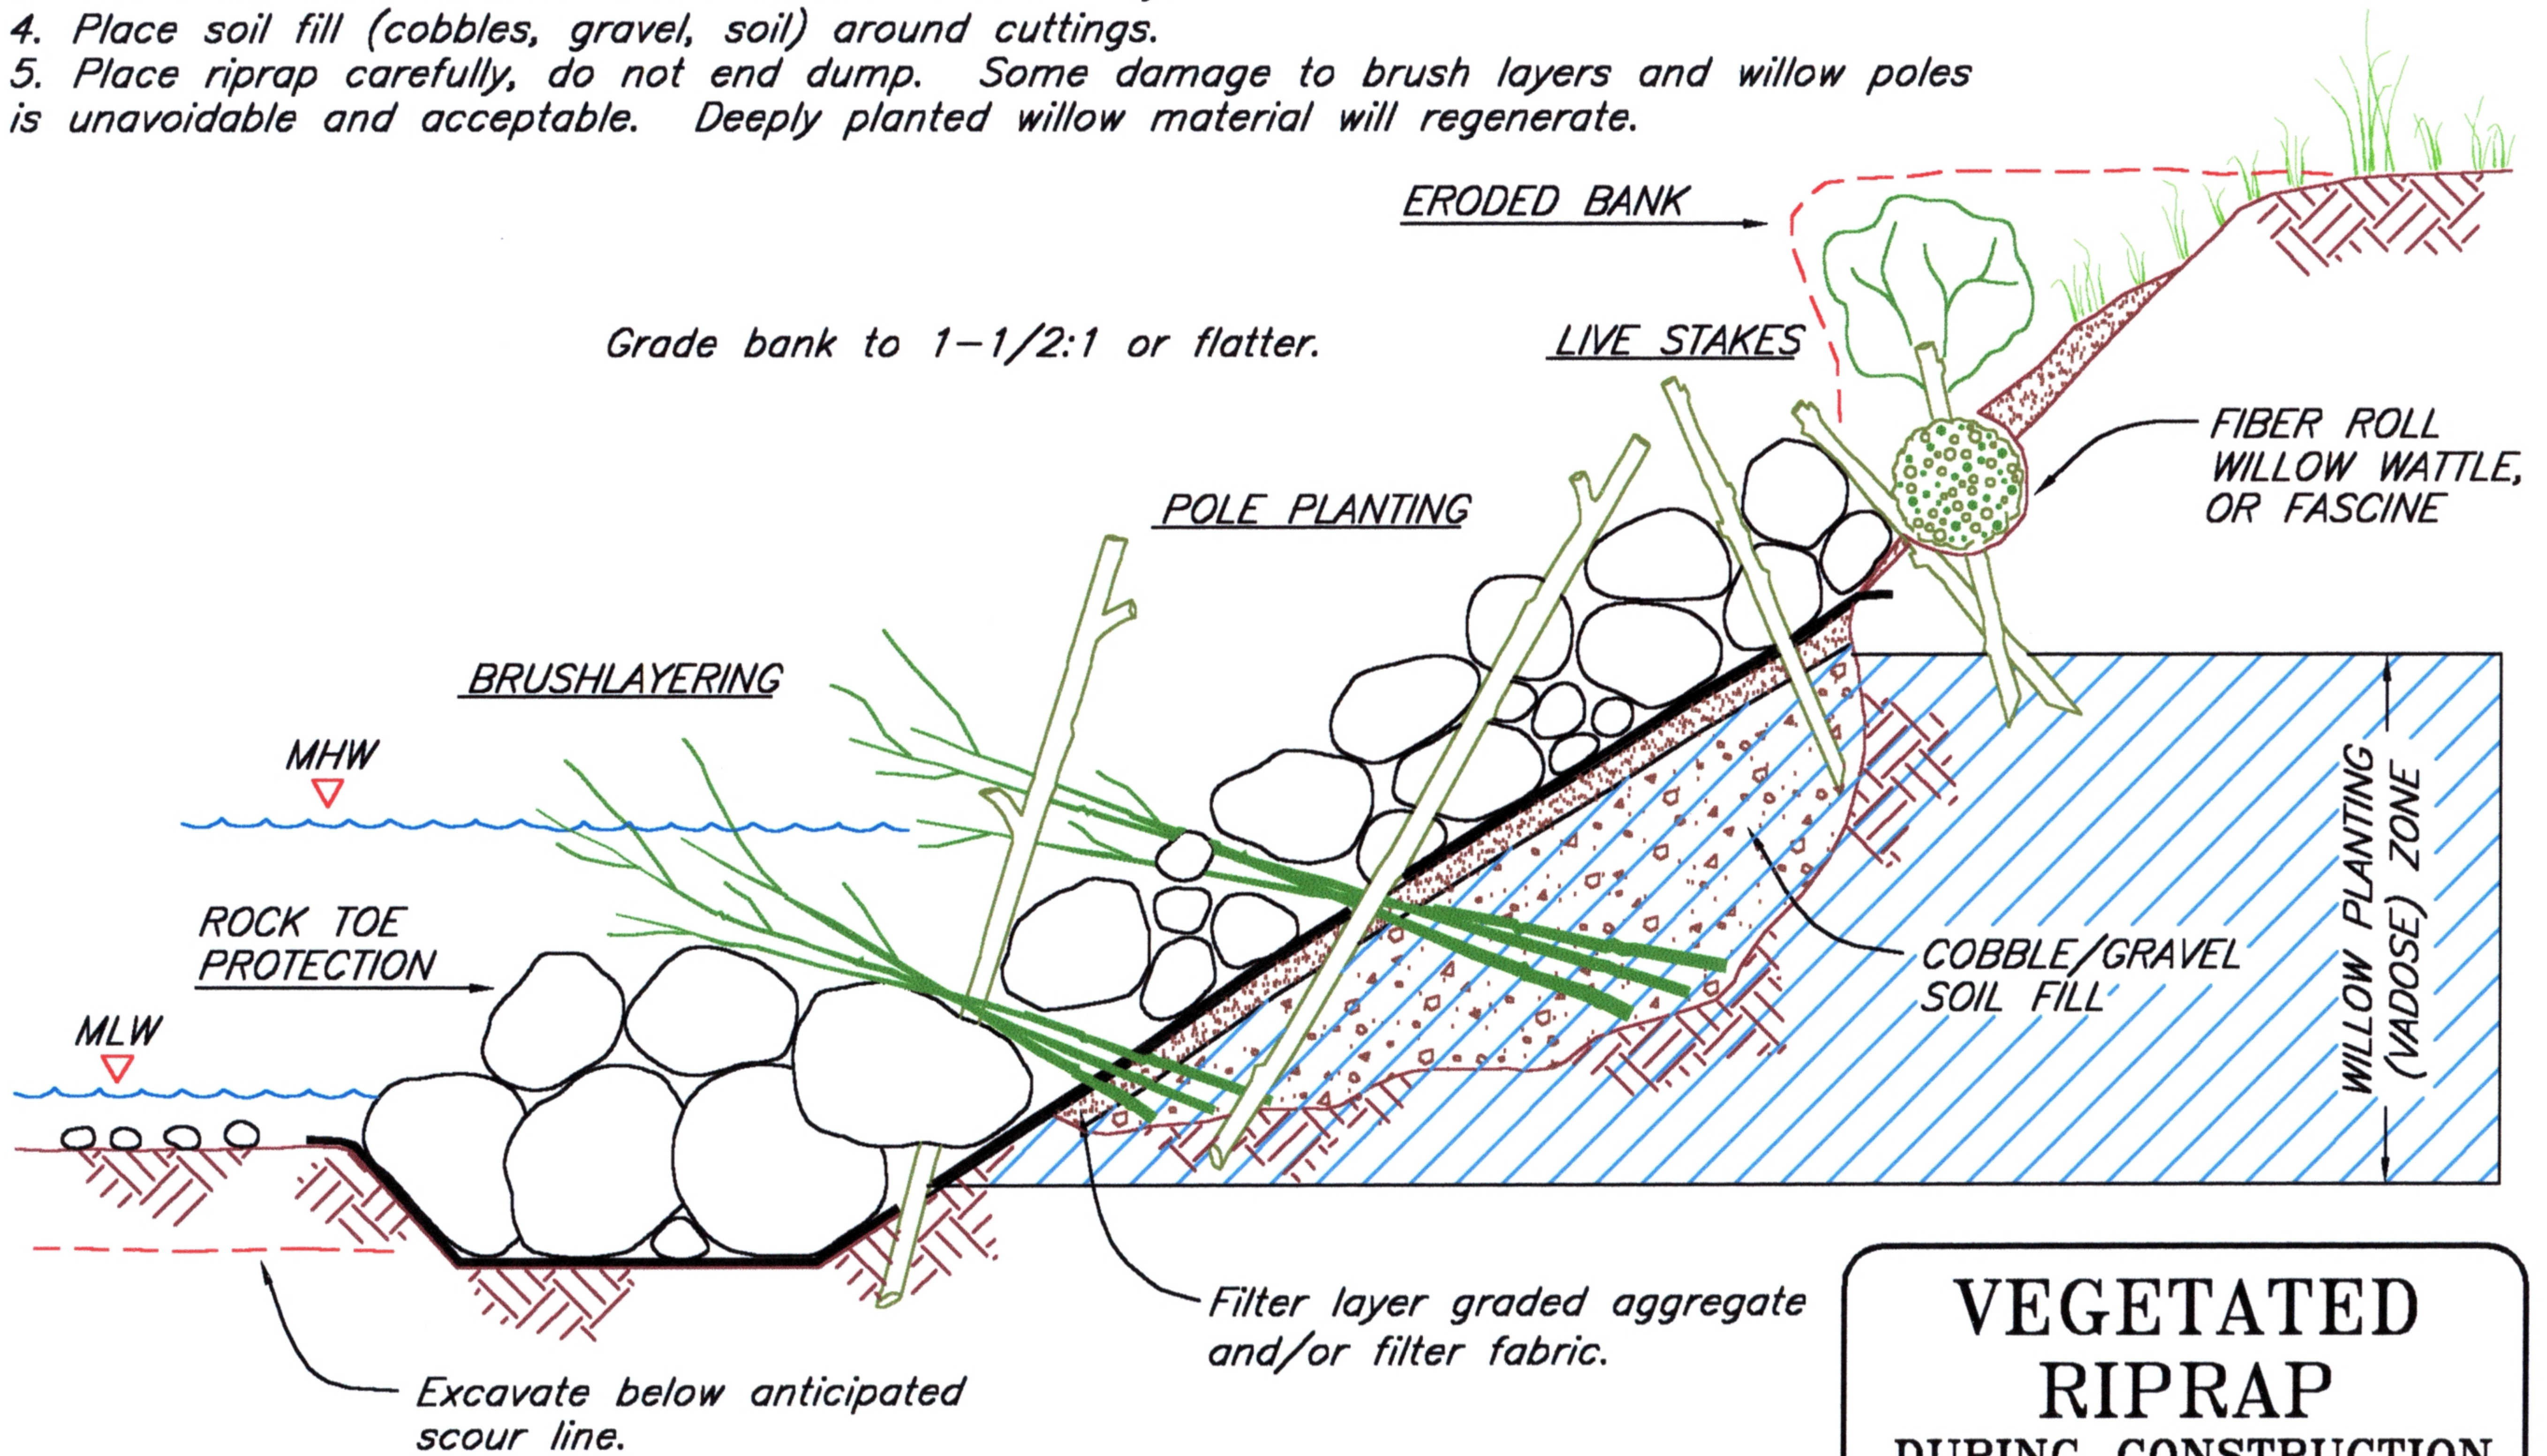

**VEGETATED  
RIPRAP  
DURING CONSTRUCTION**